



Guide for Set Top Box Upgrade – Set Top Box 6916

機頂盒升級指南 – 機頂盒6916



Please continue to the next page. If your Set Top Box is a different model, [please click here](#).
請往下頁繼續。如您的機頂盒屬於其他型號，[請按此](#)。

Guide for Decoder Upgrade 解碼器升級指南

Follow a few simple steps below to disconnect your decoder so that you can change your decoder and its related accessories.

只需按簡單步驟，即可輕易解除接駁解碼器，以便換取另一型號的解碼器及配件。



STEP 1:

Switch off the decoder by pressing the power button, then pull the power adaptor from the power socket.

步驟一：

按解碼器上的開關按鈕關機。拔除交流電變壓器以切斷電源。



STEP 2:

Press down the plastic clip on top of ① the Ethernet cable and unplug it. Then, remove ② the antenna (if any), ③ the HDMI cable or ④ the AV cords (yellow, white and red) and ⑤ the power adaptor (black) at the back of the decoder. The wires will be re-connected to the new decoder, so you are advised to leave them in situ.

步驟二：

先輕按 ① 寬頻線頂部的鎖鍵，然後拔出，再拔除解碼器後方的 ② 天線(如有)、③ HDMI線或 ④ AV線(黃、白、紅色)及 ⑤ 交流電變壓器(黑色)。電線將重新連接新換領的解碼器，所以建議你把電線保留原位。



STEP 3:

Take the items below to one of the locations mentioned in the redemption letter for exchange:

步驟三：

攜同以下物品到換領信上的其中一個指定地點換取解碼器及配件：

- ① Decoder (解碼器)
- ② Remote control (遙控器)
- ③ Power adaptor (交流電變壓器)

For more details, please contact **now TV** Customer Service Hotline at 1833 888.

如欲查詢詳情，請致電 **now TV** 客戶服務熱線 1833 888。